ital Blood Pressure Monitor

Model UA-651SL

Instruction Manual Original

1. Dear Customers

The A&D blood pressure monitor is one of the most monitors available and is designed for ease of use and This device will facilitate your daily blood pressure regime

We recommend that you read through this manual carefully before using the device for the first time.

2. Preliminary Remarks

- This device conforms to the European Directive 93/42 EEC for Medical Products. This is made evident by the CC0123 mark of conformity. (0123: The reference number to the involved notified
- evice is designed for use on adults only, not newborns or
- infants.

 □ Environment for use. The device is for use in the home healthcare
- This device is designed to measure blood pressure and pulse rate of people for diagnosis.

3. Precautions

- Precision components are used in the construction of this device. Extremes in temperature, humidity, direct sunlight, shock or dust
- should be avoided.
 Clean the device and cuff with a dry, soft cloth or a cloth dampened with water and a neutral detergent. Never use alcohol, benzene, thinner or other harsh chemicals to clean the device or
- Avoid tightly folding the cuff or storing the hose tightly twisted for long periods, as such treatment may shorten the life of the
- components.

 The device and cuff are not water resistant. Prevent rain, sweat and water from soiling the device and cuff.

 Measurements may be distorted if the device is used close to televisions, microwave ovens, cellular telephones, X-ray or other televisions, microwave ovens, cellular telephones, X-ray or other devices with strong electrical fields.

 When reusing the device, confirm that the device is clean.

 Used equipment, parts and batteries are not treated as ordinary household waste, and must be disposed of according to the applicable local regulations.

 When the AC adapter is used, make sure that the AC adapter can be readily removed from the electrical culted when necessary.

 Do not modify the device. It may cause accidents or damage to the

- device.

 To measure blood pressure, the arm must be squeezed by the culf hard enough to temporarily stop blood flow through the artery. This may cause pain, numbness or a temporary red mark to the arm. This condition will appear especially when measurement is repeated successively. Any pain, numbness, or red marks will disappear with the properties of the properties of

Contraindications

4. Parts Identification

- Contraindications
 The following are precautions for proper use of the device.

 Do not apply the cuff on an arm with another medical electrical equipment attached. The equipment may not function properly.

 People who have a severe circulatory defict in the arm must consult a doctor before using the device, to avoid medical accelulations.
- Do not self-diagnose the measurement results and start treatment by yourself. Always consult your doctor for evaluation of the results

- by yourself. Always consult your occio, in evaluation to an analyte and treatment. Do not apply the cuff on an arm with an unhealed wound. Do not apply the cuff on an arm receiving an intravenous drip or blood transfusion. It may cause injury or accidents. Do not use the device where flammable gases such as an essthetic gases are present. It may cause an explosion. Do not use the device when highly concentrated oxygen environments, such as a high-pressure oxygen chamber or an oxygen tent. It may cause a fire or explosion.

MEMORY SYS. Systolic Pressure

mmHg

Diastolic Pressure

PUL I.H.B. symbol (Irregular Heartbeat symbol)

Pressure Bar Indicator and WHO Classification Indicator

eplace all batteries with

rake another measurement. Remain stil during measurement.

Apply the cuff correctly

Remove the batteries and press the START button, and then install the batteries again. If the erro still appears, contact the

Take another

DIA. mmHg Pulse Rate

Symbols that appear on the display

Function / Meaning
Appears while measurement
is in progress. It blinks when
the pulse is detected
I.H.B. appears when an
irregular heartbeat is detected

It may light when a very slight vibration like shivering or shaking is detected.

Previous measurements

stored in memory. The battery power ind during measurement.

The battery power is lov

Unstable blood pressure due

to movement during measurement. The systolic and diastolic values are within 10 mmHg of

ncrease during the inflation. The cuff is not applied

The pulse is not detected correctly

5. Symbols

м

ErE

Artery position mark

Symbols printed on the device case

Symbols	Function / Meaning
Ф	Standby and Turn the device on.
SYS.	Systolic blood pressure in mmHg
DIA.	Diastolic blood pressure in mmHg
PUL/min	Pulse per minute
(R6(LR6,AA)	Battery installation guide
	Direct current
*	Type BF: Device, cuff and tubing are designed to provide special protection against electrical shocks.
C€ 0123	EC directive medical device label
EC REP	EU-representative
	Manufacturer
2013	Date of manufacture
	Class II device
R	WEEE label
SN	Serial number
6	Refer to instruction manual/booklet
⊕ € ⊕	Polarity of DC jack

6. Using the Monitor

6.1. Installing / Changing The Batteries

- Remove the battery cover. Remove the used batteries from
- the battery compartment in case the battery compartment in case of changing them.

 3. Insert new batteries into the battery compartment as shown, taking care that the polarities (+) and (-) are correct.

 4. Replace the battery cover. Use only R6P, LR6 or AA batteries.

CAUTION

- AUTION
 Insert the batteries as shown in the battery compartment. If installed incorrectly, the device will not work.
 When a blinks on the display and the device announces that the battery needs to be replaced, replace all batteries with new ones. Do not mix old and new batteries. It may shorten the battery life, or cause the device to malfunction. Replace the batteries two seconds or more

- the device to malfunction. Keplace the batteries we seconds or more after the device turns off.

 □ If (□ If

6.2. Connecting The Air Hose Insert the air connector plug into the air socket firmly. Air Hose Air Connector Plug 6.3. Connecting The AC Adapter Insert the AC adapter plug into the DC jack. Then, insert the AC adapter into an electrical outlet. The AC adapter, the model TB-233, is sold separately. AC adapter Plug DC Jack

6.4. Selecting The Correct Cuff

Using the correct cuff size is important for an accurate reading. If the cuff is not the proper size, the reading may yield an incorrect blood

- pressure value.
 The arm size is printed on each cuff.
 The index ▲ and proper fit range, on the cuff, tell you if you applying the correct cuff. Refer to *6.5 Applying The Arm Cuff*.
 If the index ▲ points outside of the range, contact your local deals unknown to the correct cuff.

 The arm cuff is a consumable. If it becomes worn, purchase a new one. 		
Arm Size	Recommended Cuff Size	Catalog Number
31 cm to 45 cm	Large adult cuff	CUF-F-LA
23 cm to 37 cm	Semi large adult cuff	CUF-F-SL

The circumference at the biceps.

Model UA-651SL is not designed for using a small cuff.

Symbols printed on the cuff.

DC jack

AC adapter Plug Display

START Button


Air Socket Air Connector Plug

Symbols	Function / Meaning	Recommended Action
•	Artery Position Mark	Set the mark on the artery of the upper arm or in line with the ring finger on the inside of the arm.
•	Index	
REF	Catalog number	
Α	Proper fit range for the adult cuff. It's printed on the adult cuff.	
	Range to use the large adult cuff. Over range printed on the adult cuff.	Use the large adult cuff instead of the adult cuff.
L	Proper fit range for the large adult cuff. It's printed on the large adult cuff.	
\bigcirc	Under range printed on the adult cuff.	
LOT	Lot number	
Semi large	e adult cuff Proper fit rang	је
,	S	

6.5. Applying The Arm Cuff

Applying The ATTI Cull Wrap the culf around the upper arm, about 1 to 2 cm above the inside of the elbow, as shown. Place the culf directly against the skin, as clothing may cause a faint pulse and result in a measurement error. Constriction of the upper arm, caused by rolling up a shirtsleeve, may

Consistency of the opper ann, caused by rolling up a shiftsleeve, may prevent accurate readings.
 Confirm that the index ▲ points within the proper fit range.
 Note: During measurement, it is normal for the cuff to feel very tight. (Do not be allowed)

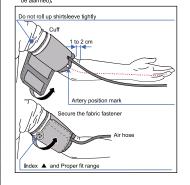

7. Measurements

- I. Normal Measurement
- Press the START button. Press the START button. All of the display segments are displayed. Zero is displayed blinking briefly. Then the display changes, as indicated in the figure at the right, as the measurement begins. The cuff starts to inflate. It is normal for the cuff to feel very tight. A pressure bar indicator is displayed, as in All of the display segments bar indicator is displayed, as in the figure at the right, during

nflation
If you wish to stop inflation at any time
press the START button again.

When inflation is complete, deflation starts automatically and the \(\psi\) (heart mark) blinks, indicating that the measurement is in progress. Once the pulse is detected, the mark blinks with each pulse beat.

Note: If an appropriate pressure is not obtained, the device starts to inflate again automatically.


When the measurement is complete, the systolic and diastolic pressure readings and pulse rate are displayed. The cuff exhausts the remaining air and deflates completely.

Press the START button again to turn off the power tote: Model UA-651SL is provided with an automatic power shut-off function. Allow at least 3 minutes between measurements on the

7.2. Measurement with the Desired Systolic Pressure

If re-inflation occurs repeatedly, use the following methods. If your

- Place the cuff on the arm at heat level (preferably the left arm).
- Press the START button.
- During the zero blinks, press and hold the START button until a number about 30 to 40 mmHg higher than your expected systolic pressure appears.
- When the desired number is reached, release the START button to start measurement. Then continue to measure your blood pressure as described on the section "7.1 Normal Measurement".

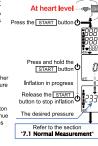

Press the START button

Starts inflation

Pressurizing

Systolic pressure

Diastolic pressure

Pulse rate Exhausts remaining air automatically

WHO classification

Turn off with the

START buttor

Measurement in progress

68

150

90

7.3. Notes for Accurate Measurement

- 3. Notes for Accurate Measurement
 Sit down in a comfortable position. Place the arm to be used for the
 measurement on a table or other support so that the center of the cuff
 will be at the same height as your heart.
 Place the center of the cuff at the same level as your heart.
 Relax for about five to ten minutes before measurement. If you are
 excited or depressed by emotional stress, the measurement will reflect
 this stress as a higher (or lower) than normal blood pressure reading
 and the pulse reading will usually be faster than normal.
 Remain still and keep quiet during measurement.
 Do not measure immediately after physical excress or a bath. Rest for
 twenty or thirty minutes before taking the measurement.
 An individual's blood pressure varies constantly, depending on what you
 are doing and what you have eaten. What you drink can have a very
 strong and rapid effect on your blood pressure.
 This device bases its measurements on the heartbeat. If you have a very
 weak or irregular heartbeat, the device may have difficulty determining
 your blood pressure.
 Should the device detect a condition that is abnormal, it will stop the
 measurement and display an error symbol. Refer to the section "S
 Symbols" for the description of the symbols.
 This device is intended for use by adults only. Consult with your

- This device is intended for use by adults only. Consult with your physician before using this device on a child. A child should not use this device unattended.

 Try to measure your blood pressure at the same time every day.

8. Recalling the Memory Data

The device automatically stores up to thirty blood pressure and pulse measurements in memory. Data stored in memory are assigned a data number in the order of the newest to the oldest. The oldest data displays as "na 1." The M symbol in the upper left corner of the display indicates that you are viewing previous data stored in memory.

8.1. Recalling Data When nothing is displayed, press and hold the START button to recall the stored data.

- 2. Release the button when
- displaying the average data. The data number and stored data are automatically displayed in order from the last measurement.
- The display will turn off automatically after all data is displayed.
- Note: If you press the START button while recalling data, the device turns off. 8.2. Clearing Data

When turning off the device, press and hold the START button until the "[[r no " is

displayed. Select "[Lr YES" to clear

3. Data is cleared when the M

The device turns off automatically.



ess and hold the START button Release the button the mark

Average data

Stored Data

"[Lr 'YES Turns off aut

No data

.a. [5]

9. What is an Irregular Heartbeat

The UA-65(SL) provides a blood pressure and pulse rate measurement even when an irregular heartheat occurs. An irregular heartheat defined as a heartheat that varies by 25% from the average of all heartheats during the blood pressure measurement. It is important that you are relaxed, remain still and on talk during measurements. It is expected to the common of the

10. Pressure Bar Indicator



11.About Blood Pressure

What is Blood Pressure?
Blood pressure is the force exerted by blood against the walls of the arteries. Systolic pressure occurs when the heart contracts. Diastolic pressure occurs when the heart expands. Blood pressure is measured in millimeters of mercury (mmHg).

12.WHO Classification Indicator

Each segment of the bar indicator corresponds to the WHO blood pressure classification.

Severe hypertension
Moderate hypertension
Mild hypertension
High normal
Normal
Optimal The indicator displays a segment, based on the current data, corresponding to the WHO classification.

13. Troubleshooting Problem Possible Reason

	Nothing appears on the display, even when the power is turned on.	Batteries are drained.	Replace all batteries with new ones.
		Battery terminals are not in the correct position.	Reinstall the batteries with negative and positive terminals matching those indicated on the battery compartment.
	The cuff does not inflate.	Battery voltage is too low. blinks. If the batteries are drained completely, the mark does not appear.	Replace all batteries with new ones.
	The device does not measure. Readings are too high or too low.	The cuff is not applied properly.	Apply the cuff correctly.
		You moved your arm or body during measurement.	Make sure you remain still and quiet during measurement.
		The cuff position is not correct.	Sit comfortably and still. Place your arm on a table with your palm facing upward and the cuff at the same level as your heart.
			If you have a very weak or irregular heat beat, the device may have difficulty in determining your blood pressure.
		The value is different from that measured at a clinic or doctor's office.	At a clinic or doctor's office, an apprehension may cause an elevated reading. Home measurement reduces the effects of outside influences on blood pressure readings, supplements the doctor's readings.
			Remove the batteries. Place them back properly and take another measurement.

Note: If the actions described above do not solve the problem, contact the dealer. Do not attempt to open or repair this product, as any attempt to do so will make your warranty invalid.

14.Maintenance

Do not open the device. It uses delicate electrical components and an intricate air unit that could be damaged. If you cannot fix the problem using the troubleshooting instructions, contact the authorized dealer in your area or our customer service department. The A&D customer service will provide technical information, spare parts and units to authorized dealers. The device was designed and manufactured for a long service life. However it is generally recommended to have the device inspected every 2 years, to ensure proper functioning and accuracy. Please contact the authorized dealer in your area or A&D for maintenance.

15.Technical Data

	Measurement method	Oscillometric meas	urement
	Measurement range	Pressure:	0 - 299 mmHg
		Systolic pressure:	60 - 279 mmHg
		Diastolic pressure:	40 - 200 mmHg
		Pulse:	40 - 180 beats / min
	Measurement accuracy	Pressure:	±3 mmHg
		Pulse:	±5 %
Power supply		4 x 1.5V batteries (R6P, LR6 or AA) or
		AC adapter (TB-23)	3) (Not included)
	Number of measurem	ents	

Approx. 700 times LR6 (alkaline batteries) Approx., 700 times LFM (alkaline batteries)
Approx. 200 times R6P (mangasee batteries)
With pressure value 180 mmHg, room
temperature 23 °C,
Internally powered ME equipment (Supplied
by batteries) / Class II (Supplied by adapter)
Continuous operation mode
According to ANSI / AAMI SP-10 1992
IEC 60601-1-2: 2007
Last 30 measurements

Clinical test EMC Memory

IEC 660611-12: 2007

Last 30 measurements
+10 to +40 °C / 15 to 85 %H / 800 to 1060 hPa
-20 to +60 °C / 10 to 95 %RH
Approx, 96 [W] x 68 [H] x 130 [D] mm
Approx, 240 g, excluding the batteries
Cuff Type BF[£]
Device: 5 years (when used six times a day)
Cuff: 2 years (when used six times a day) Operating conditions Transport / Storage co Dimensions

Accessory AC adapter
The adapter is to connect the device to a power source at
Please contact your local A&D dealer for purchasing. The

- 1	adapter is required to be inspected or replaced periodically.		
	TB-2	33	
		TB-233C	Input: 100-240V Output: 6V 500mA OC 0
		TB-233BF	Input: 240V Output: 6V 500mA ⊖

Cure - L 31 cm to 45 cm
ff 23 cm to 37 cm
rence at the biceps. Large adult cuf Semi large adult cuff n size: The circumfere

Catalog Number Plug (Outlet type)

Note: Specifications are subject to change without prior notice. EMC table information is listed on our website: http://www.aandd.jp/products/manual/medical/emc_acadapter_en.pdf



A&D Company, Limited 1-243 Asahi, Kitamoto-shi, Saitama 364-8585 JAPAN Telephone: [81] (48) 593-1111 Fax: [81] (48) 593-1119

■■ A&D INSTRUMENTS LTD.

Unit 24/26 Blacklands Way, Abingdon Business Park, Abingdon, Oxfordshire OX14 10V United Kingdom

Telephone: [44] (1235) 550420 Fax: [44] (1235) 550485

A&D ENGINEERING, INC. 1756 Automation Parkway, San Jose, California 95131 U.S.A. Telephone: [1] (408) 263-5333 Fax: [1] (408)263-0119

 A&D Australasia Pty Ltd.

 32 Dew Street, Thebarton, South Australia
 5031 AUSTRALIA

 Telephone: [61] (8) 8301-8100
 Fax: [61] (8) 8352-7409